



Reader A (in) and Reader B (out) is wired the same.

- + - VCC
- GND
- D1 (L) - DAT
- D0 (S) - CLK

On JCM Connect Set SW1 to on for Wiegand 26

JCM Connect Configuration Configuration - Devices Select device & readers

Reader A	
Door_1_A	
Validation Mode (offline):	Only in archive pass
Reader type:	NAL
Bus Type:	Wiegand
Append number of bits for Wiegand	<input type="text"/>
Frequency:	125kHz
<input checked="" type="checkbox"/> Ignore mode:	Last media (on the same readers)
* Ignore Time (sec):	1
<input type="checkbox"/> * Comparison Mask:	90A000 000000000000000000000000 90A000 000000000000000000000000